


AGENCYSPY ALERTOMETER

Created by: Austin Scott
www.austinscottdesign.com
@Aus10_Scott

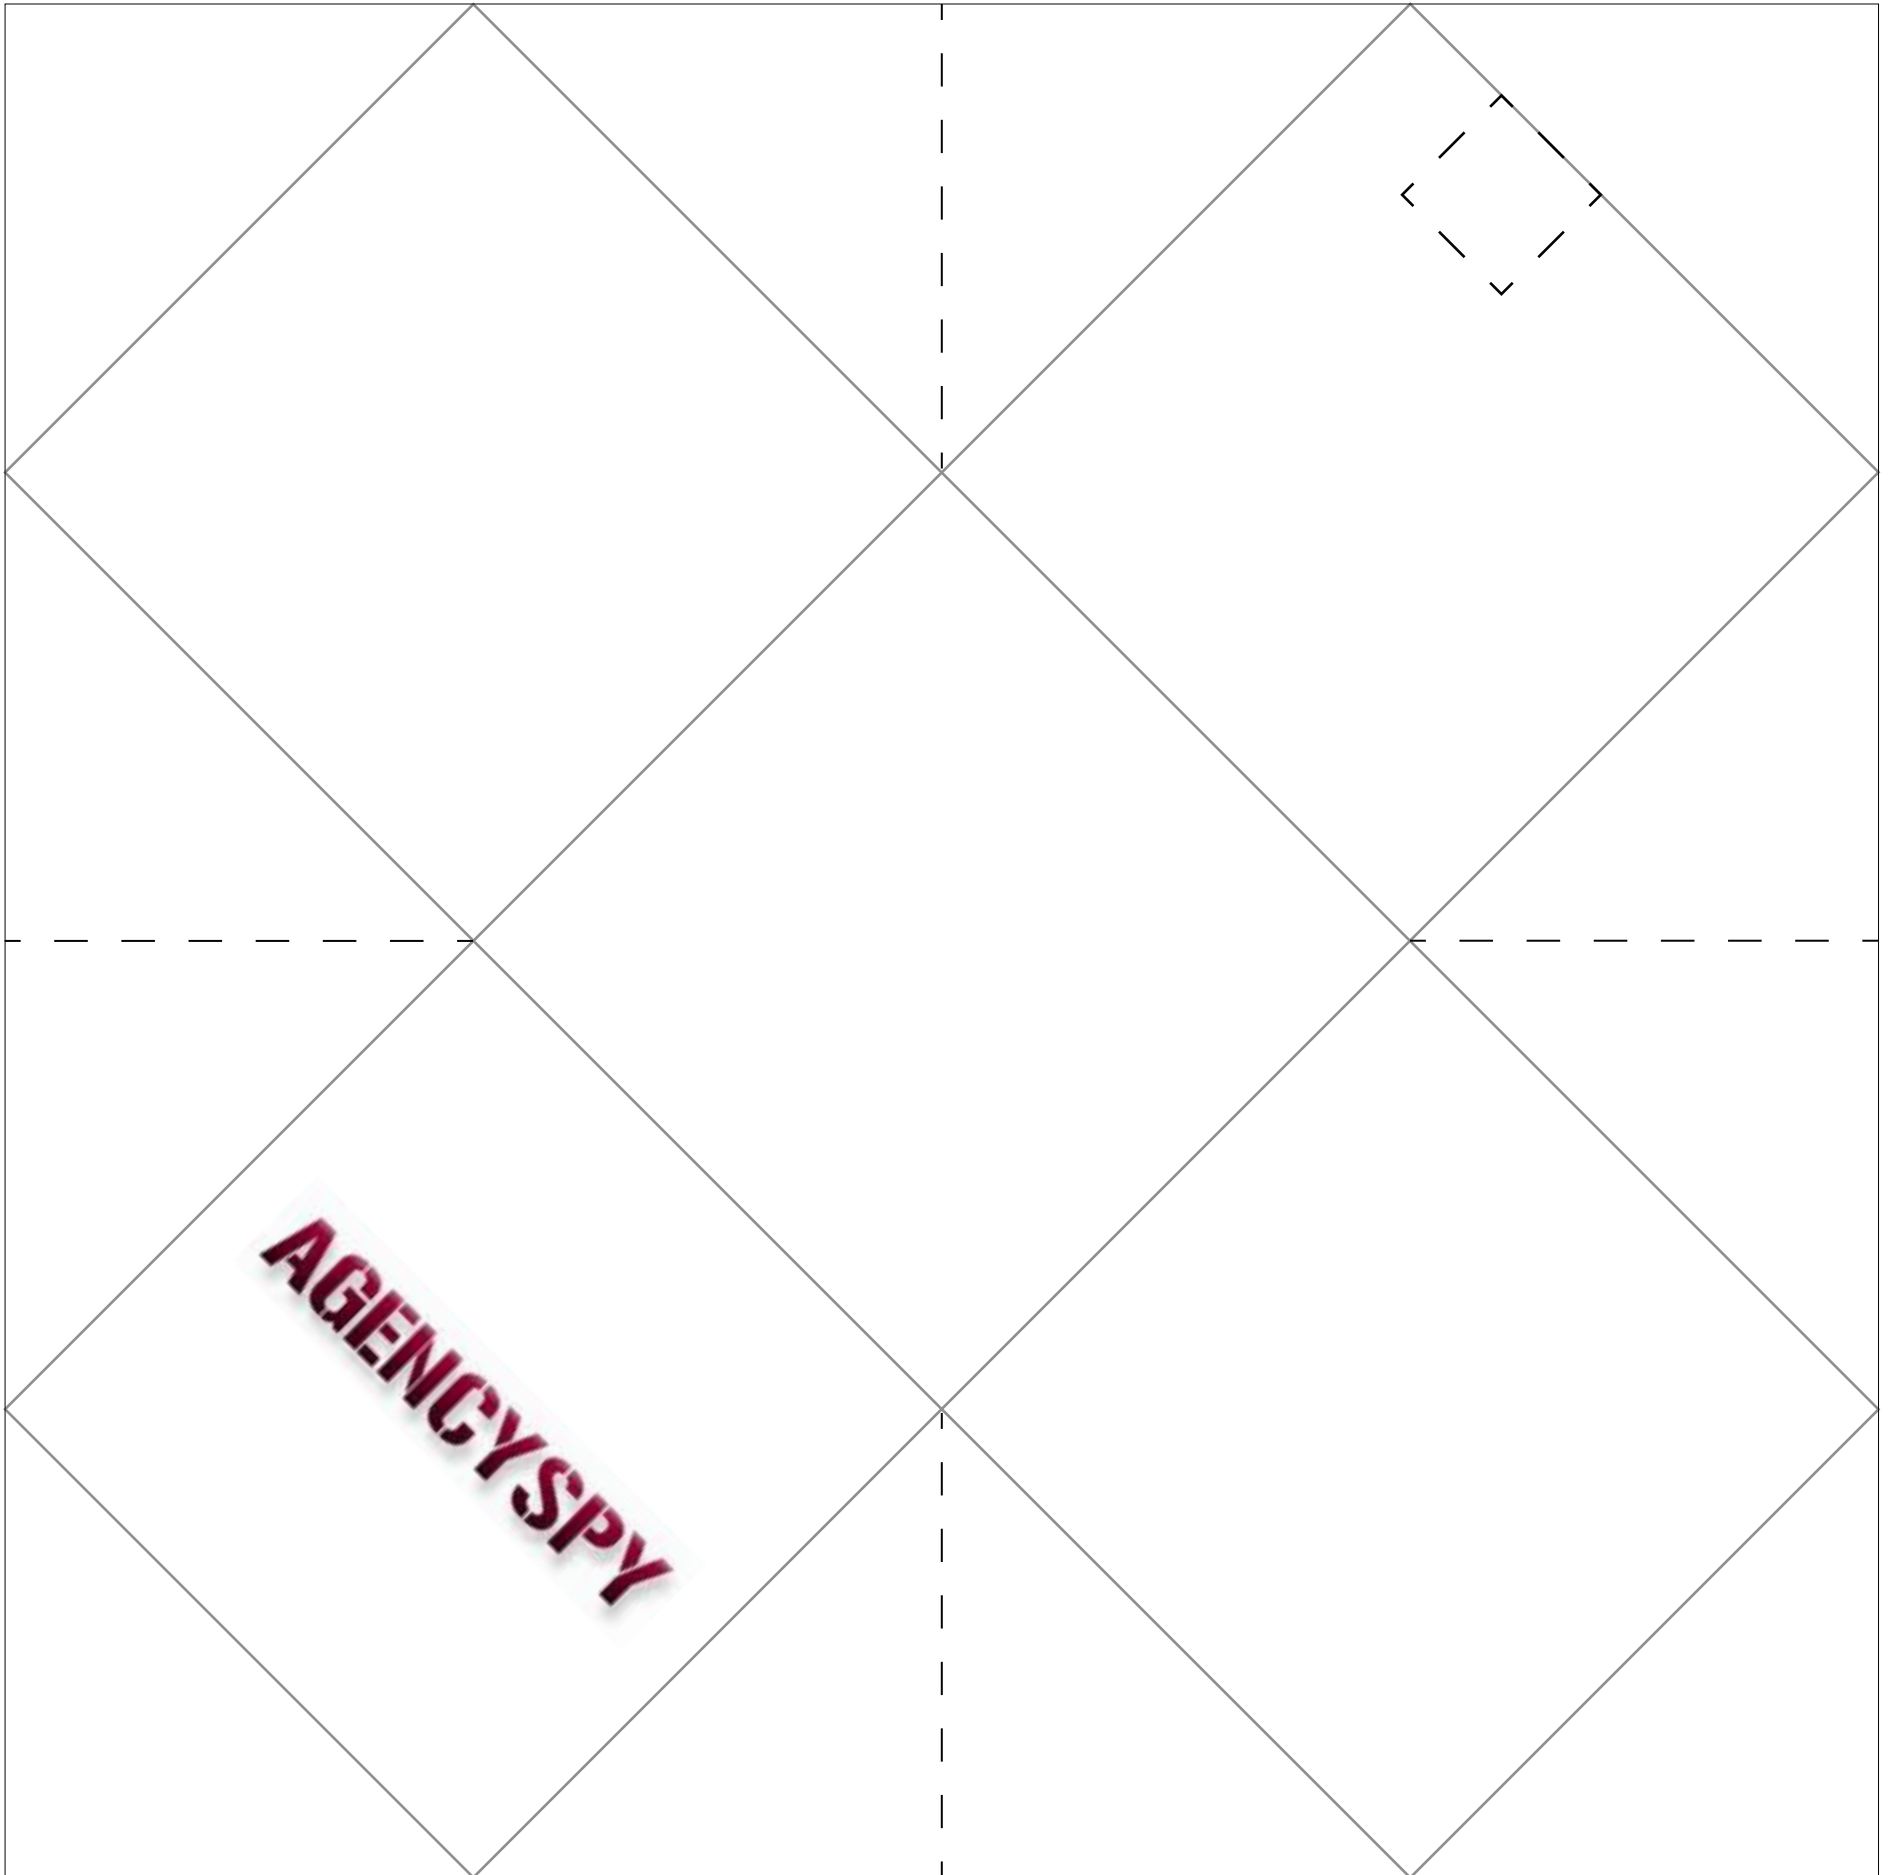

1. Cut square from 11" x 17" sheet.
2. Trim off triangle tips and slit along dotted line.
3. Fold and tape together.
4. Place over arduino and enjoy the Agency Spy goodness.

WARNING: Paper and electronics don't always mix, make sure any exposed wiring isn't touching paper.